


Snap-Cap Diffuser Instructions (Part No. AD15)



Thank you for purchasing this Snap-Cap diffuser from Pentair Aquatic Eco-Systems, Inc.

The diffuser consists of two simple parts: the support base and a flexible, snap-on check diaphragm. During aeration the diaphragm lifts from the base, allowing the air to exit through the orifices in the diaphragm. When the airflow stops, the diaphragm is instantly seated against the base by the pressure head of liquid, which prevents backflow and clogging. The edge design of the diffuser locks on the removable diaphragm to avoid blowoff during unusual pressure surges.

Specification Data

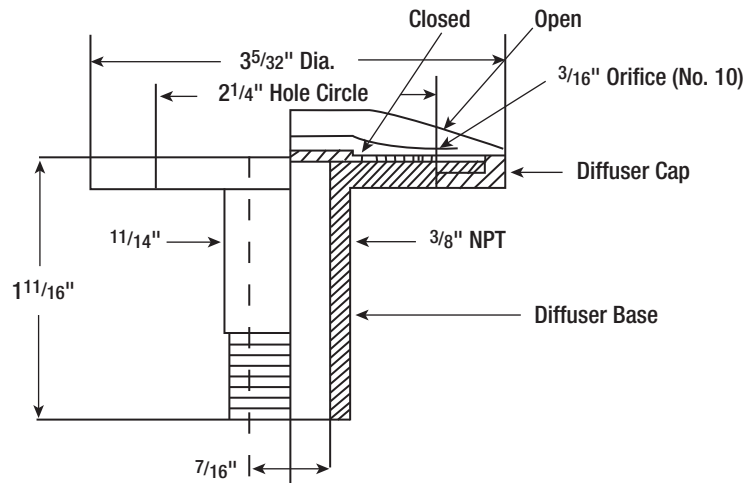

AQUATIC ECO-SYSTEMS™

2395 Apopka Blvd. • Apopka, FL 32703 • Phone: 877-347-4788 • Fax: 407-886-6787
PAES.General@Pentair.com • PentairAES.com


Snap-Cap Diffuser Instructions (Part No. AD15)



Thank you for purchasing this Snap-Cap diffuser from Pentair Aquatic Eco-Systems, Inc.

The diffuser consists of two simple parts: the support base and a flexible, snap-on check diaphragm. During aeration the diaphragm lifts from the base, allowing the air to exit through the orifices in the diaphragm. When the airflow stops, the diaphragm is instantly seated against the base by the pressure head of liquid, which prevents backflow and clogging. The edge design of the diffuser locks on the removable diaphragm to avoid blowoff during unusual pressure surges.

Specification Data

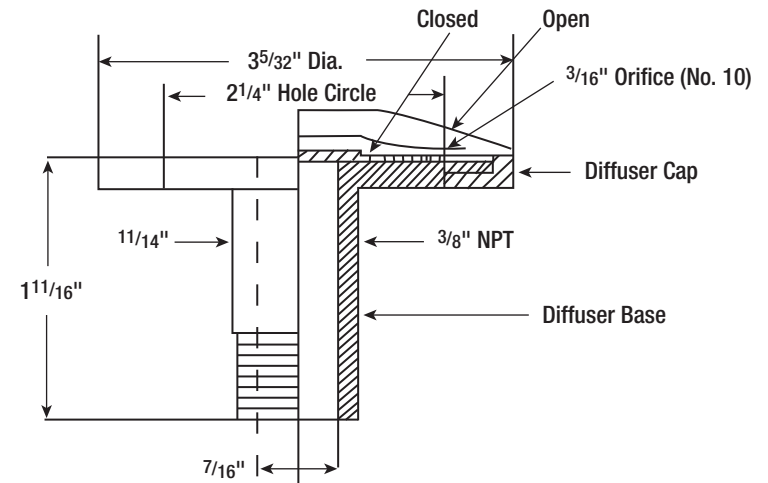

AQUATIC ECO-SYSTEMS™

2395 Apopka Blvd. • Apopka, FL 32703 • Phone: 877-347-4788 • Fax: 407-886-6787
PAES.General@Pentair.com • PentairAES.com