

Linear Piston Air Pumps

(Part Nos. SL22–SL88)




The Linear Piston Air Pump you have selected will give excellent service for many years. Inspect your pump and accompanying components upon receipt for:

1. Physical damage.
2. Completeness:
 - a. Manifold
 - b. Hose.

Call Pentair AES when shipping container appears undamaged and parts are missing. Call the shipper if parts have been damaged in shipment or if container appears to have been opened during shipment and parts are missing.

CAUTION

Always take care when using electricity around water. To prevent water from running down the electrical cord of an aquarium device, always use a drip loop. To create a drip loop, be sure that the power cord extends below the outlet as shown below.

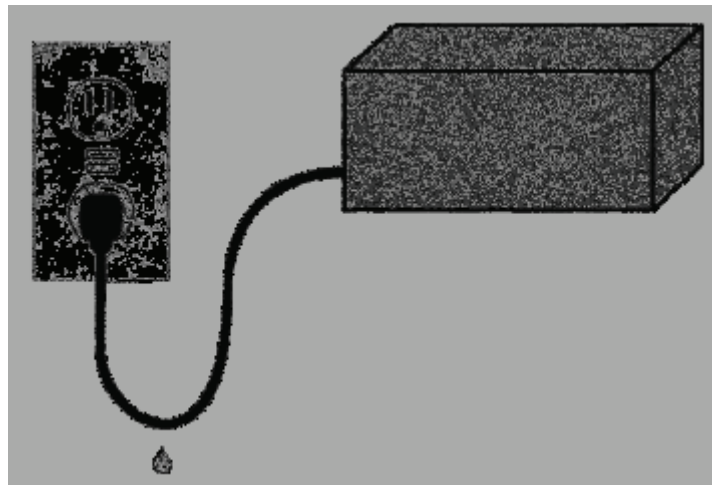

AQUATIC ECO-SYSTEMS™