




AQUATIC ECO-SYSTEMS™

VERUS™ PUMP WITH CONSTANT FLOW TECHNOLOGY

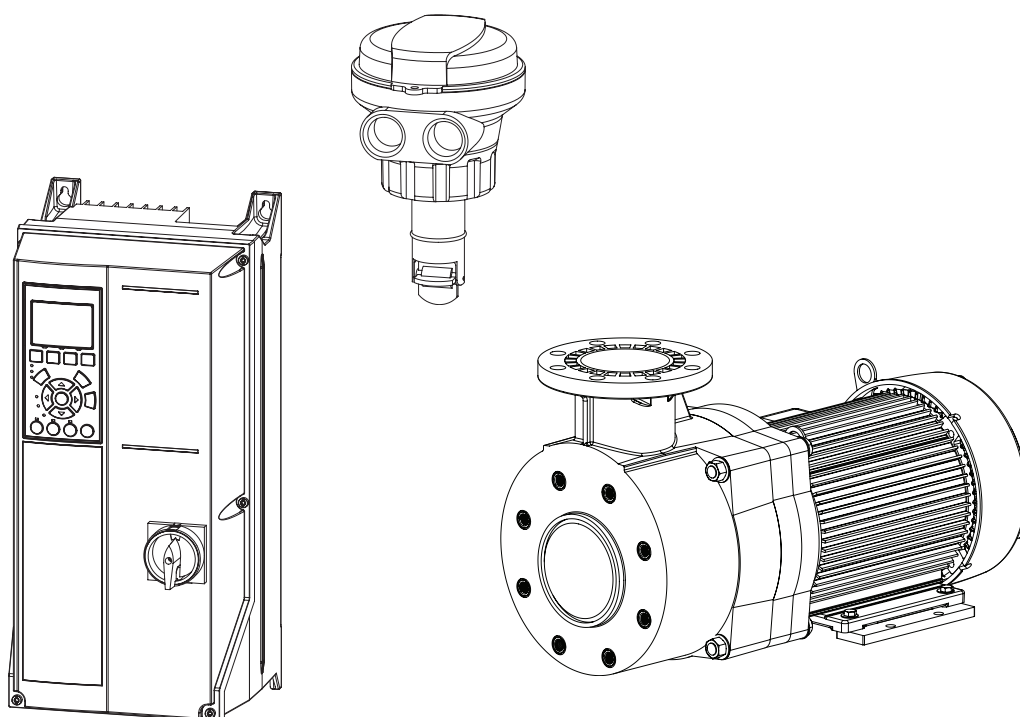

USER'S GUIDE

IMPORTANT SAFETY INSTRUCTIONS
READ AND FOLLOW ALL INSTRUCTIONS
SAVE THESE INSTRUCTIONS

IMPORTANT WARNING AND SAFETY INSTRUCTIONS



Important Notice:

This guide provides general installation and operation instructions for the Verus™ Pump with Constant Flow Technology. Please refer to the Verus 850 Pump Installation and User's Guide (P/N 351671), the Signet 2537 Paddlewheel Flowmeter Manual and the VLT Aqua Drive FC 202 Instruction Manual for specific information regarding the installation and operation of individual pump components.

Consult Pentair Aquatic Eco-Systems™ with any questions regarding this equipment.

Attention Installer: This guide contains important information about the installation, operation and safe use of this product. This information should be given to the owner and/or operator of this equipment after installation or left on or near the pump. This pump is for use for aquaculture installations ONLY. Do not use with any type of swimming pool, hot tub, or spa.


Attention User: This manual contains important information that will help you in operating and maintaining this pump. Please retain it for future reference. This pump is for use for aquaculture installations ONLY. Do not use with any type of swimming pool, hot tub, or spa.



Before installing this product, read and follow all warning notices and instructions which are included. Failure to follow safety warnings and instructions can result in severe injury, death, or property damage. Call (877) 347-4788 (US) or (407) 866-3939 (INT) for additional free copies of these instructions.

Components

1. Constant Flow Drive (CFD)
2. Flow Meter
3. Verus 850 Aquaculture Duty Pump

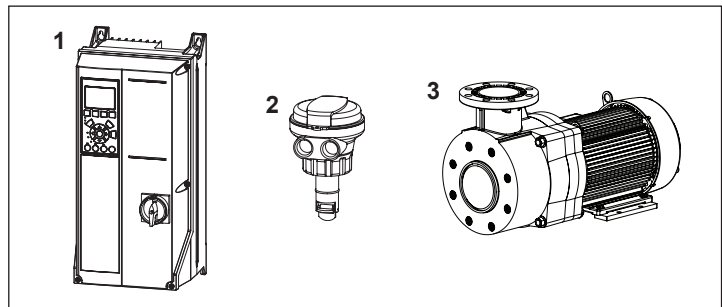

Wiring the Flow Meter to the Constant Flow Drive

Install the flow meter in accordance with the flow meter instructions provided with this product, then wire the flow meter to the drive according to the instructions below:

1. Strip the outer flow meter wiring insulation as far as needed from the intended point of connection.
2. Strip the inner flow meter wiring insulation back 3/8 in. (9.5 mm) from the intended point of connection, exposing two separate wire leads.
3. Break the outer flow meter wiring insulation 3 in. (2.5 cm) from the point of connection, exposing the ground shielding. Install the exposed ground shielding into the grounding springs. See **Figure 1**.
4. The flow meter wiring connection will consist of a brown lead and a white lead. Connect the brown lead to wiring terminal 12. Connect the white lead to wiring terminal 54.

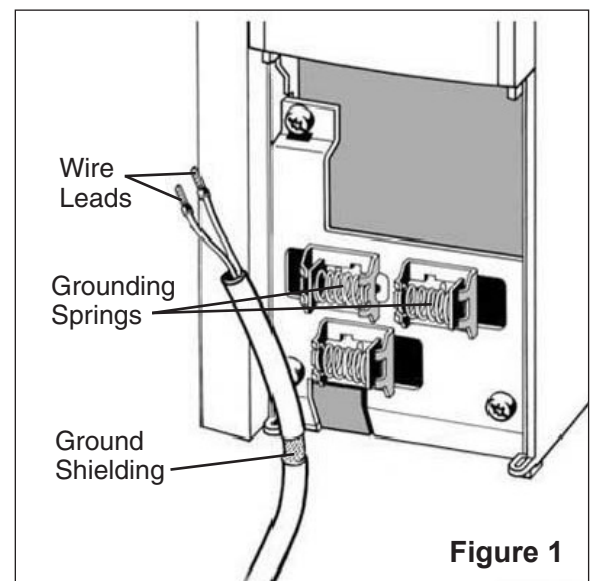


Figure 1

Programming Flow Set Point

Programming Flow Set Point:

1. Press **Quick Menu**.
2. Press **OK** to select *My Personal Menu*.
3. Press **OK** to program Flow Set Point.
4. Use the **Left** or **Right** arrows to scroll between units. Use the **Up** or **Down** arrows to change a selected unit.
5. Press **OK** to save the settings.
6. Press **Auto On** to activate the system or **Status** to return to the home screen. Continue to step 7 for instructions on programming multiple flow rates.

Selecting Active Set-up:

7. Press **Quick Menu**.
8. Press **OK** to select *My Personal Menu*.
9. Use the **Up** or **Down** arrows to scroll to parameter set 0-11, *Programming Setup*. Press **OK** to select.
10. Use the **Up** or **Down** arrows to scroll to *Set-up 1* or *Set-up 2*. Press **OK** to save active set-up selection.

Programming Setup-1 or Setup-2 Flow Rate:

11. Press **Quick Menu**.
12. Press **OK** to select *My Personal Menu*.
13. Use the **Up** or **Down** arrows to scroll to parameter set 20-21 *Setpoint 1*. Press **OK** to program.
14. Use the **Left** and **Right** arrows to switch between units, and use the **Up** or **Down** arrows to change the unit values.
15. Press **OK** to save settings.

Setting Run-time Parameters:

16. Press **Quick Menu**.
17. Press **OK** to select *My Personal Menu*.

ON TIME

18. Use the **Up** or **Down** arrows to scroll to parameter 23-00, *On Time*. Press **OK** to program.
19. Press **OK** to select *[0] Timed Action 1*.
20. Use the **Left** and **Right** arrows to switch between units, and use the **Up** or **Down** arrows to change the unit values.
21. Press **OK** to save settings.


OFF TIME

22. Press **Back** twice to return to *My Personal Menu*. Then press **OK** to select.
23. Use the **Up** or **Down** arrows to scroll to parameter 23-02, *Off Time*. Press **OK** to program.
24. Press **OK** to select *[0] Timed Action 1*.
25. Use the **Left** and **Right** arrows to switch between units, and use the **Up** or **Down** arrows to change the unit values.
26. Press **OK** to save settings.

OCCURRENCE

27. Press **Back** twice to return to *My Personal Menu*. Then press **OK** to select.
28. Use the **Up** or **Down** arrows to scroll to parameter 23-04, *Occurrence*. Press **OK** to program.
29. Press **OK** to select *[0] Timed Action 1*.
30. Use the **Left** and **Right** arrows to switch between units, and use the **Up** or **Down** arrows to change the unit values.
31. Press **OK** to save settings.
32. Press **Status** to return to the home screen.

"2" = Active Setup (Value of 1 or 2)
 "(1)" = Programming Setup (Value of 1 or 2)

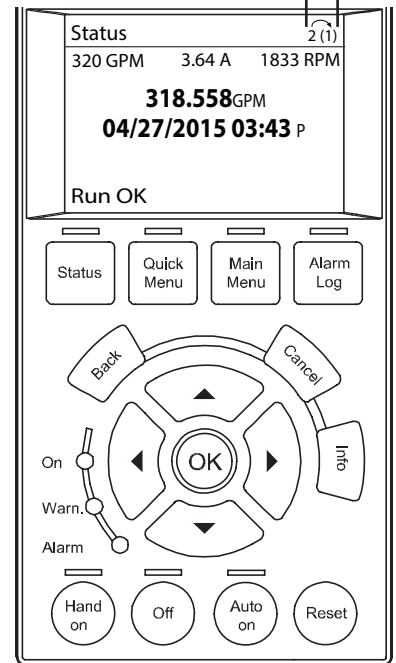

Cleaning the Flow Meter

It is recommended that the flow meter be inspected and cleaned once every thirty (30) days. The drive will display a “Flow Meter Error” alert at the end of this thirty day period (see **Figure 2**). Below are instructions for cleaning the flow meter and clearing the drive Flow Meter Error alert.

Cleaning Procedure:

1. Remove the locking nut that secures the flow meter in place with counterclockwise turns.
2. Remove the flow meter from the PVC saddle.
3. Clean the paddle wheel (see **Figure 3**) located at the bottom of the flow meter.



Use minimally abrasive material to carefully wipe any debris from the paddle wheel. Use of overly abrasive cleaning materials can damage the paddle wheel.

4. Insert the flow meter into its PVC saddle.
5. Tighten down the locking nut.

Clearing the Flow Meter Error:

1. Press **Quick Menu**.
2. Press **OK** to select *My Personal Menu*.
3. Use the **Up** or **Down** arrows to scroll to parameter set 23-15, *Reset Maintenance Word*. Press **OK** to select.
4. Use the **Up** or **Down** arrows to scroll to “1-Do Reset”. Press **OK** to reset timers and clear the flow meter error alert.

Note: The thirty (30) day period between flow meter error alerts will now be restarted.

5. Press **Status** to return to the home screen.

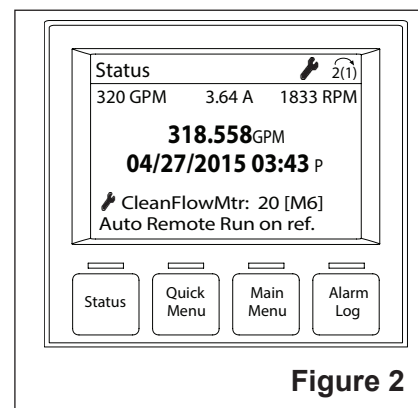


Figure 2

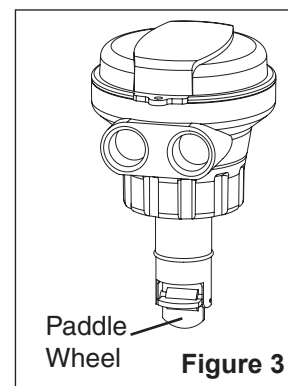


Figure 3



2395 APOPKA BLVD., APOPKA, FL 32703 • US (877) 347-4788 • INT. (407) 886-3939

WWW.PENTAIRAES.COM

All Pentair trademarks and logos are owned by Pentair or one of its global affiliates. Pentair Aquatic Eco-Systems™ and Verus™ are trademarks and/or registered trademarks of Pentair Aquatic Eco-Systems, Inc. and/or its affiliated companies in the United States and/or other countries. Unless expressly noted, names and brands of third parties that may be used in this document are not used to indicate an affiliation or endorsement between the owners of these names and brands and Pentair Aquatic Eco-Systems, Inc. Those names and brands may be the trademarks or registered trademarks of those third parties. Because we are continuously improving our products and services, Pentair reserves the right to change specifications without prior notice. Pentair is an equal opportunity employer.

© 2015 Pentair Aquatic Eco-Systems Inc. All rights reserved. This document is subject to change without notice.



VERUSCFT-OM REV. A 6/15/15